	1	•
Aι	10	10
1 70	ιu	10

Audio				
Item Wire Color		Polarity	Wire Location	
Radio 12V	red/white	+	radio, white 20 pin plug, pin 10	
Radio Ground	black	_	radio, white 20 pin plug, pin 20	
Radio Ignition	yellow	+	radio, white 20 pin plug, pin 1	
Radio Illumination	green/white (dimmer)	+	radio, white 20 pin plug, pin 9	
Factory Amp Turn-on	pink or blue	+	radio, white 18 pin plug, pin 17 or 7	
Power Antenna	pink	+	radio, white 20 pin plug, pin 14	
Left Front Speaker (+/-)	white/blue - black/yellow	+,-	radio, white 20 pin plug, pins 8 and 18	
black/yellow at the amplifier, wh amplifier, white 14 pin plug, pin	nite 18 pin plug, pins 8 and 1 s 6 and 14.		er, the speaker wires are white/blue - wires are white/blue - black/yellow at the	
Right Front Speaker (+/-)	white/red - black/red	+,-	radio, white 20 pin plug, pins 6 and 16	
black/red at the amplifier, white amplifier, white 14 pin plug, pin	18 pin plug, pins 7 and 17. 7 s 5 and 13.	The tweeter wir	er, the speaker wires are white/red - res are white/red - black/red at the	
Left Rear Speaker (+/-)	yellow/blue - gray/blue	+,-	radio, white 20 pin plug, pins 7 and 17	
If equipped, the amplifier is under the driver seat. On vehicles with amplifier, the speaker wires are yellow/blue - gray/blue at the amplifier, white 14 pin plug, pins 1 and 7.				
Right Rear Speaker (+/-)	yellow/red - gray/red	+,-	radio, white 20 pin plug, pins 5 and 15	
If equipped, the amplifier is und gray/red at the amplifier, white 1 Center Channel (+/-)		es with amplifie	er, the speaker wires are yellow/red -	
Subwoofer (+/-)	green - yellow (1), blue - white (2)	+,-	amplifier, white 18 pin plug, pins 1 and 9 (1), 2 and 10 (2)	
If equipped, the amplifier is under the driver seat.				
Aux. Audio Input Left (+/-)	blue/white - black/wht (common) (Lancer Evolution)	+,-	radio, white 18 pin plug, pins 13 and 14	
Aux. Audio Input Right (+/-)	purple - black/white (common) (Lancer Evolution)	+,-	radio, white 18 pin plug, pins 4 and 14	
RSE Video (+/-)	N/A			
RSE Audio Left (+/-)	N/A			
RSE Audio Right (+/-)	N/A			
Satellite Radio 12 Volts	red/white	+	Satellite Radio Tuner, white 14 pin plug, pin 1	
If equipped, the Satellite Radio Tuner is behind the glove box.				
Satellite Radio Ground	black	-	Satellite Radio Tuner, white 14 pin plug, pin 8	
Satellite Radio Ignition	(CAN bus)			
Satellite Radio Antenna	(coaxial cable)			
Satellite Audio Left (+/-)	yellow - blue (common)	+,-	Satellite Radio Tuner, wht 14 pin plug, pins 6, 7	
Satellite Audio Right (+/-)	brown - blue (common)	+,-	Satellite Radio Tuner, wht 14 pin plg, pins 14, 7	