

**BALANCER TIMING BELT TENSION CHECK**

Check the balancer timing belt tension as follows:

1. Apply a pressure of approximately 100N (22 pounds) at the center (arrow area) between the sprocket as shown then inspect whether the deflection is within the standard value.

**Standard value: 5 – 10 mm (0.20 – 0.39 inch)**

2. If not within the standard value, adjust the belt tension.  
(Refer to [P.11A-50.](#))

