

## 11A-52

### ENGINE MECHANICAL TIMING BELT



#### REMOVAL SERVICE POINTS

##### <<A>> VALVE TIMING BELT REMOVAL

**⚠ CAUTION**

Never turn the crankshaft counterclockwise.

1. Turn the crankshaft clockwise, align each timing mark to set number 1 cylinder to TDC of its compression stroke.

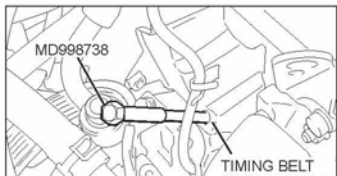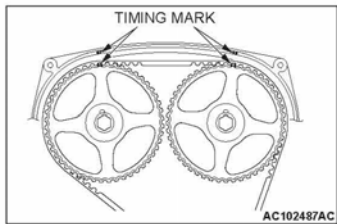

2. Remove the timing belt under cover rubber plug and then set the special tool MD998738.

**⚠ CAUTION**

The special tool MD998738 can be gradually installed at a rate of a 30 degree turn per second. If it is screwed in all at once, the timing belt tensioner adjuster rod will not easily retract and the special tool MD998738 may bend.