
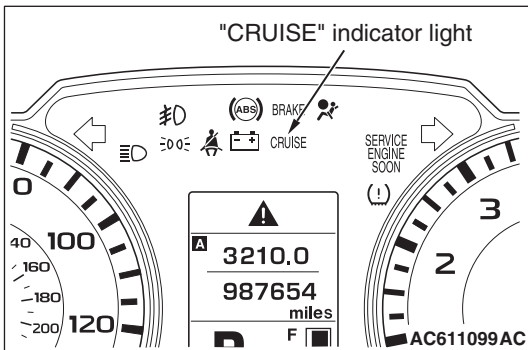


**DIAGNOSTIC FUNCTION**

M1172004900223

**HOW TO READ DIAGNOSTIC TROUBLE CODES**

1. Turn the ignition switch to the "ON" position while pushing the "COAST/SET" switch. Then, within one second, release the "COAST/SET" switch and push the "ACC/RES" switch.

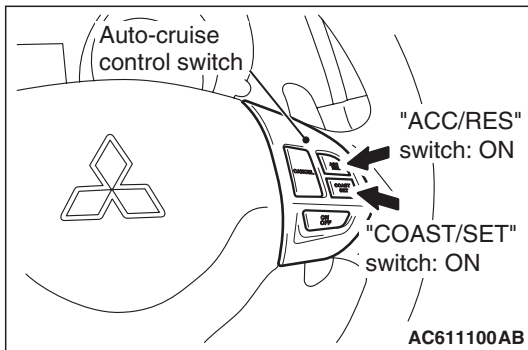

2. Read a diagnostic trouble code by observing the flash display pattern of the "CRUISE" indicator light in the combination meter.

**Diagnostic result display method when using the "CRUISE" indicator light**

When the diagnostic trouble code number 23 is output	When no diagnostic trouble code is output
<p>AC604884 AC</p>	<p>AC604885 AC</p>

*NOTE: Other on-board diagnostic items are also output as voltage waveforms corresponding to diagnostic trouble code numbers.*

**HOW TO ERASE DIAGNOSTIC TROUBLE CODES**

Disconnect the negative (-) battery cable.