



(2) Pass the valve timing belt around the exhaust-side camshaft sprocket, and hold the valve timing belt with paper clips.

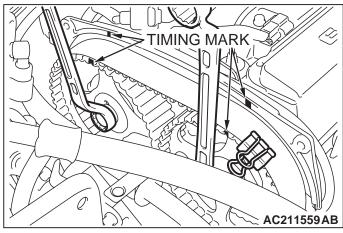

(3) Use two wrenches to align the timing mark on the rocker cover with that on the camshaft sprocket. Pass the valve timing belt around the inlet-side camshaft sprocket.

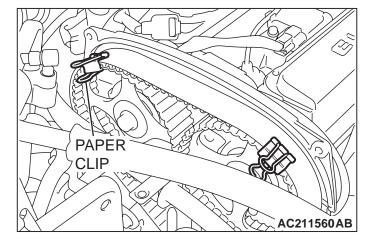

- (4) Hold the valve timing belt with paper clips.
- (5) Pass the valve timing belt around the timing belt tensioner pulley.

## **⚠** CAUTION

Incorporate the valve timing belt. Then apply reverse rotation (counterclockwise rotation) pressure to the cam shaft sprocket. Re-check to see that each timing mark is aligned while the tension side of the belt is tight.

(6) Remove the two paper clips.

## **TSB Revision**